


FLEX BANNERS TEARDROPS & BOW FLAGS


INSTRUCTIONS & SPECIFICATIONS

1/10/2010

INSTRUCTIONS

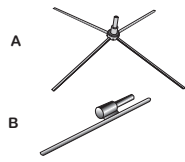


A - Hard Surface Stand

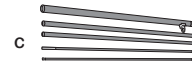

C - Aluminum & Fiberglass Poles


B - Ground Stake

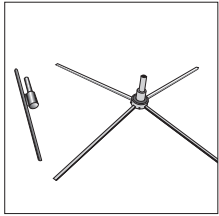

1


Hammer the sharpened end of the ground stake into the ground or unfold the hard surface stand.

Tip: To allow the banner to rotate in the wind leave a 2" ground clearance. (see below)

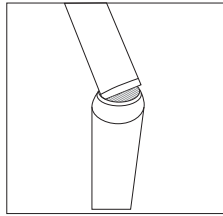


2

Connect the poles by inserting each small pole into the next larger size pole.

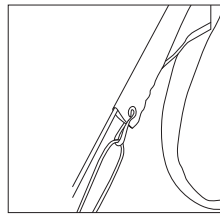

3


Slide the fabric banner over the poles until tight.

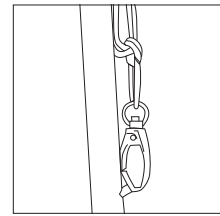

4

Attach the banner clip to the attachment point on the large pole.

Note: To help reduce wrinkles and create optimal banner tension, you may need to tighten or loosen the bungee.

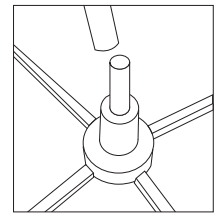


5

Slide the pole over the post on the stand.

SPECIFICATIONS

TEARDROP

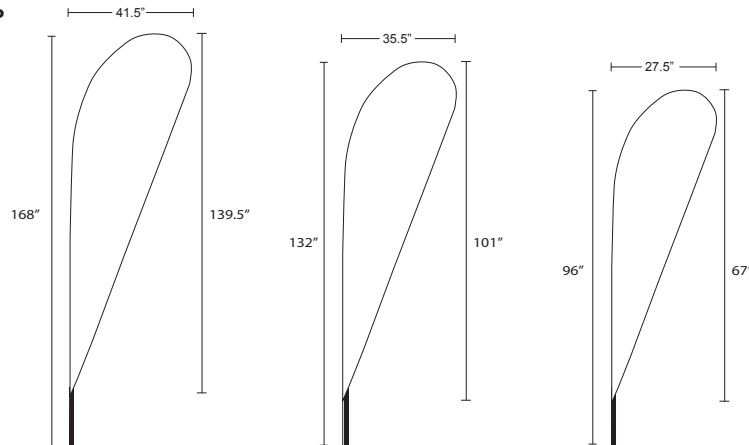

BOW FLAG

